TECHNICAL NOTEEDITION ANGLAISE



77 11 321 582 MARCH 2003



Type S/Section

Clio II

Gearbox:

XBX X

57A

57A

REPLACEMENT OF CENTRAL AIR VENT BLADES

• Engine: XXX

XXX


Basic manual:

Workshop Repair Manual 338

You will find in this technical note the instructions to replace the central vent outer blades of the dashboard.


INTERIOR ACCESSORIES Dashboard

Composition of the replacement parts.

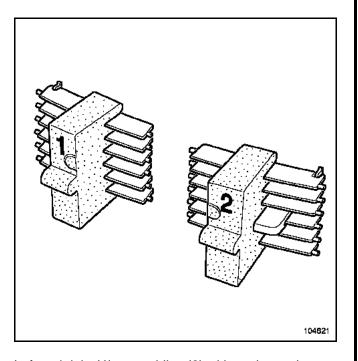


Left and right (1) assemblies (2) with setting tools.

REMOVAL

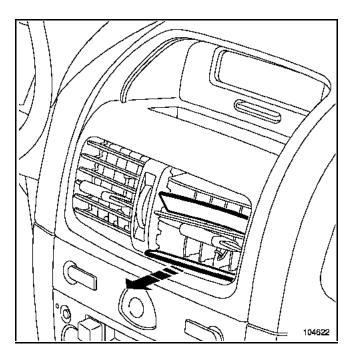


Unclip and/or remove the outer blade assembly.

REFITTING

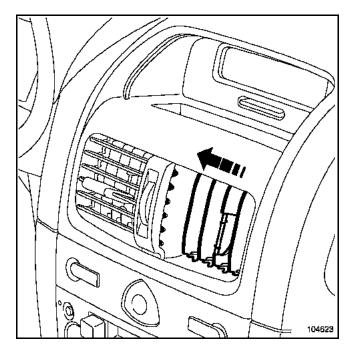


Place the inner blades towards the air inlet control wheel.

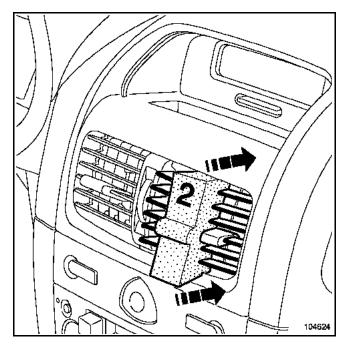


Place the blade caps in their housing on the opposite side of the air inlet command wheel.

INTERIOR ACCESSORIES Dashboard

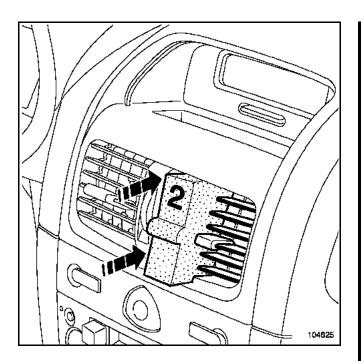

Clip the blade caps in their housing on the opposite side of the air inlet command wheel.

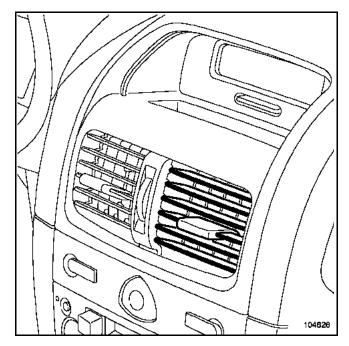

Remove the setting tool.

Ensure that the vent blades are working correctly.